

# 1. GETTING STARTED

Please read this user's manual carefully to be able to safely install, use and maintain the product at maximum performance. Keep this user's manual next to your product for future reference. The information in this user's manual is subject to change without notice.

## Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following marks that indicate hazardous situations.

- **Warning**  
Indicates a hazardous situation which could result in serious injury.
- **Caution**  
Indicates a situation which could damage the equipment or other apparatus.
- **Note**  
Indicates additional information to make the user aware of possible problems and information of any importance to help understand, use and maintain the installation.

## Meaning of Symbols



To reduce the risk of electric shock, do not remove cover (or back).  
No user serviceable parts inside.  
Refer servicing to qualified service personnel.



This symbol indicates dangerous voltage inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

## Safety Warning

This product has been manufactured to comply with international safety standards. Please read the following safety precautions carefully.

## Safety Instructions and Precautions

1. MAINS SUPPLY ( 100-240V A.C., 50/60Hz )
  - Operate this product only from the type of power supply indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
  - Disconnect the product from the mains before you start any maintenance or installation procedures.
2. OVERLOADING
  - Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.

# 1. GETTING STARTED

## 3. LIQUID

- The product should not be exposed to liquid of any kind. In addition, no objects filled with liquid should be placed on the apparatus.

## 4. CLEANING

- Disconnect the product from the wall outlet before cleaning.
- Use a light damp cloth (no solvents) to dust the product.

## 5. VENTILATION

- The slots on top of the product must be left uncovered to allow proper airflow into the unit.
- Do not stand the product on soft furnishings or carpets.
- Do not stack electronic equipments on top of the product.

## 6. ATTACHMENTS

- Do not use any unsupported attachments as these may be hazardous or cause damage to the product.

## 7. CONNECTION TO THE CABLE TV SIGNAL

- Connect all components before plugging any power cords into the wall outlet.
- Always turn off the product, TV and other components before you connect or disconnect any cables.

## 8. CONNECTION TO THE TV

- Disconnect the product from the mains before connecting or disconnecting the cable from the TV. Failure to do so can damage the TV.

## 9. LOCATION

- Place the product indoors to avoid exposing it to lightning, rain or sun.
- Do not place it near a radiator or heat register.
- We recommend that the product has 10cm clearance from any other appliances susceptible to electromagnetic influences, such as a TV or a VCR.
- Do not block the openings with any object, and do not place the product on a bed, sofa, rug, or other similar surface.
- If you place the product on a rack or a bookcase, ensure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.
- Do not place the product on an unstable cart, stand, tripod, bracket, or table where it can fall. A falling product can cause serious injury to a child or adult, and serious damage to the appliance.

## 10. LIGHTNING, STORM or NOT IN USE

- Unplug the product from the wall outlet and disconnect the antenna during a thunderstorm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-surges.

## 11. EXTRANEIOUS OBJECTS

- Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts.

# 1. GETTING STARTED

## 12. REPLACEMENT of PARTS

- When replacement of parts is required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitution may result in additional damage to the unit.

### Warning

1. To avoid damage of the power cord or plug;
  - Do not modify or process the power cord or plug arbitrarily.
  - Do not bend or twist the power cord.
  - Make sure to disconnect the power cord holding the plug.
  - Keep heating appliances as far as possible from the power cord in order to prevent the cover vinyl from melting.
  - The mains plug, as a disconnection device, shall remain readily accessible by the user.
2. To avoid electrical shock;
  - Do not open the main body.
  - Do not insert metal or inflammable objects inside the product.
  - Do not touch the power plug with wet hands.
  - Disconnect the power cord in case of lightning.
3. To avoid damage of product;
  - Do not use the product when it is out of order. If you continue to use the product when defective, serious damage can be caused to it. Make sure to contact your local product distributor if the product is out of order.
  - Do not insert metal or alien substance into the slots for the modules or Smartcards. It may cause damage to the product and reduce its life span.
4. Standby Mode;
  - It is recommended to leave the product in Standby mode during long periods when not being used e.g. Over night.

# 1. GETTING STARTED

## 1. Getting Started

1.1 Package Contents	6
1.2 Front Panel	6
1.3 Rear Panel	7
1.4 Remote Control Unit (RCU)	8
1.5 Connecting TV	10
1.6 Connecting Audio System	10
1.7 Powering On	11

## 2. Installation

2.1 Antenna Setting	12
2.2 Satellite List	13
2.3 Transponder List	14
2.4 Motor Setting	14
2.5 Limit Setup	15

## 3. Setting

3.1 Network	16
3.2 Software Upgrade	17
3.2.1 USB Transfer	17
3.2.2 Network Upgrade	17
3.3 User Settings	18
3.4 Audio/Video	18
3.5 Date/Time	19
3.6 Timer List	20
3.7 Parental Lock	21
3.8 Version	21
3.9 Factory Reset	22
3.10 Smart RCU (Remote Control Unit)	22

## 4. Channel MGT

4.1 Channel Manager	23
4.1.1 Move	23
4.1.2 Lock	23
4.1.3 Delete	24
4.1.4 Delete All	24
4.1.5 Sort	24
4.1.6 Rename	25
4.1.7 Find	25
4.2 Favorite Editor	25
4.2.1 Favorite List	25
4.2.2 Add	26
4.2.3 Move	26
4.2.4 Delete	26

## 5. Media Center

5.1 Multimedia Apps (Applications)	27
5.1.1 YouTube	28
5.1.2 Vimeo	28
5.1.3 Dailymotion	28
5.1.4 Online	29
5.1.5 IPTV	29
5.1.6 Internet Radio	29
5.1.7 Adult	30
5.1.8 News	30
5.1.9 Web Albums	30



# 1. GETTING STARTED

- 5.1.10 Google Maps-----31
- 5.1.11 Weather -----31
- 5.1.12 Game Download -----31
- 5.1.13 DLNA -----32
  - 5.1.13.1 DMP -----33
  - 5.1.13.2 DMR -----34
- 5.2 Multimedia Player -----38
  - 5.2.1 Movie-----38
  - 5.2.2 ISO Image -----39
  - 5.2.3 Music -----39
  - 5.2.4 Photo -----39
  - 5.2.5 Games -----40
  - 5.2.6 EBook -----40
  - 5.2.7 Record Manager -----40
  - 5.2.8 Disk Manager -----41
- 5.3 Multimedia Setup -----41
- 5.4 Streaming Buffer size -----42
- 5.5 PVR Setup -----42
- 5.6 FTP Client -----42
- 5.7 GAME-----43
- 6. Specification -----44**

# 1. GETTING STARTED

## 1.1 Package Contents

Before using your product, please check all package contents before using your product.

- Remote Control
- Batteries
- User's Manual
- Adaptor
- A/V Cable



Remote Control



 
Batteries



User's Manual




Adaptor

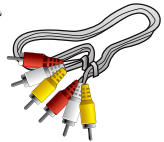

A/V Cable

★ It supports HDMI cable


## 1.2 Front Panel

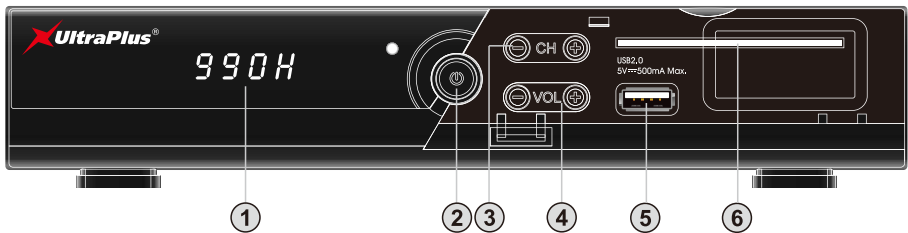 

- ① **Display** : Shows channel information, either TV or Radi
- ② **Standby** : Switches between operation and standby modes
- ③ **Channel Up/Down** : Moves the TV/RADIO channel up or down
- ④ **Volume Up/Down** : Adjusts the TV/RADIO volume up or down
- ⑤ **USB** : Connects to an USB cable
- ⑥ **Smart Card Reader Slot**

# 1. GETTING STARTED

 
## 1.3 Rear Panel

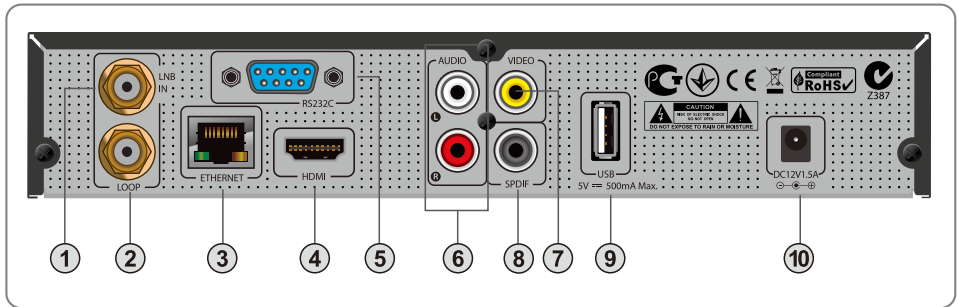

- ① **LNB IN** : Connects to the satellite antenna cable
- ② **LOOP** : Connects to another digital satellite receiver
- ③ **ETHERNET** : Connects to the network with an Ethernet cable
- ④ **HDMI** : Connects to the TV using an HDMI cable
- ⑤ **RS-232C** : Connects to the PC to upgrade the software programme of the product
- ⑥ **AUDIO L/R** : Connects to the TV using a RCA cable
- ⑦ **VIDEO(CVBS)** : Connects to the TV using a RCA cable
- ⑧ **S/PDIF** : Outputs the digital audio signals
- ⑨ **USB** : Connects to an USB cable
- ⑩ **DC12V** : Connect this to the AC/DC Power Adaptor





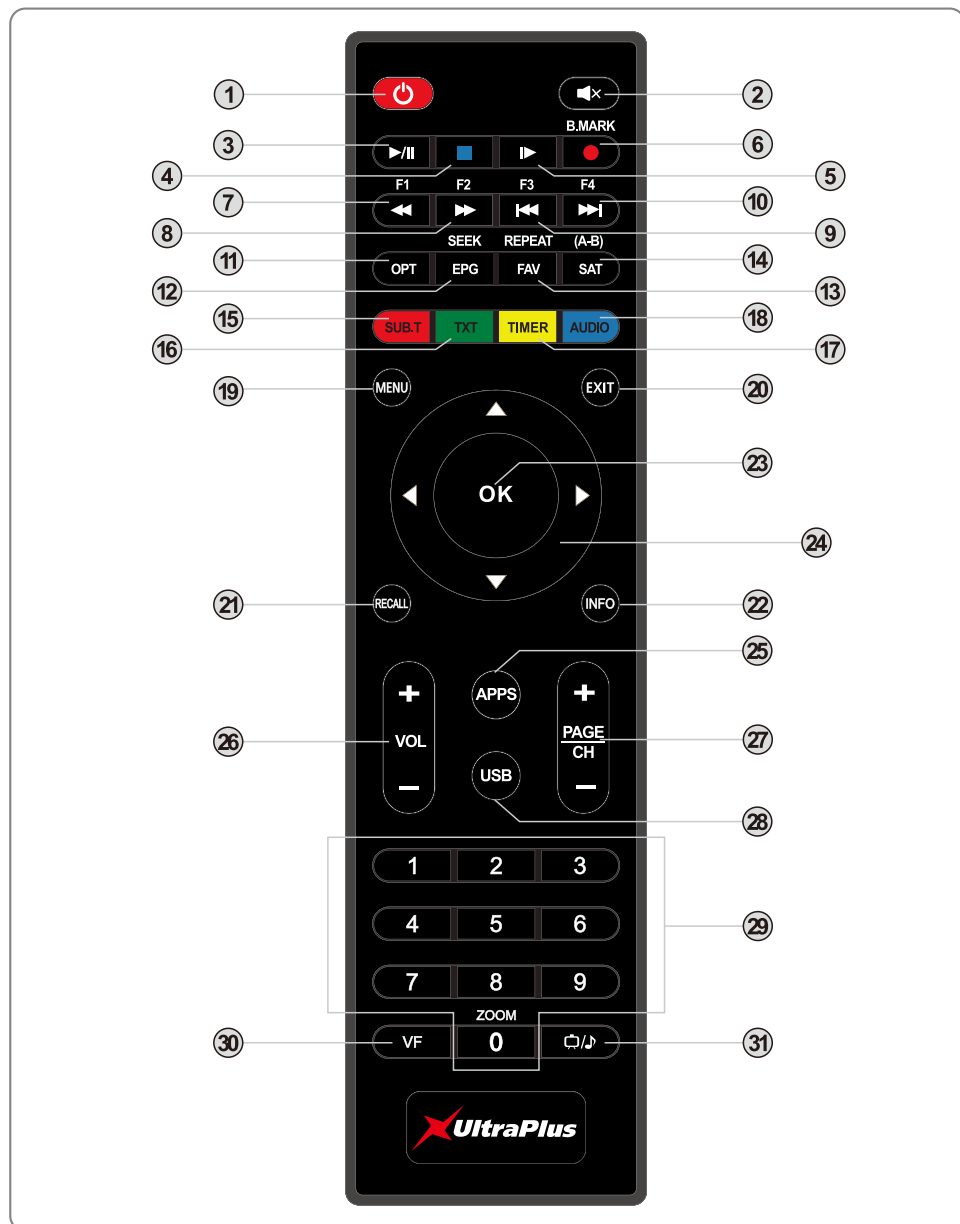 






# 1. GETTING STARTED

## 1.4 Remote Control Unit (RCU)



 
# 1. GETTING STARTED

## 1.4 Remote Control Unit (RCU)

- ①  (**POWER ON**) : Switches between operation and standby modes.
- ②  (**MUTE**) : Mutes or un-mutes the audio temporarily.
- ③  (**PLAY/PAUSE**) : Plays at normal speed or pause.
- ④  (**STOP**) : Stops the recording or playback program.
- ⑤  (**PLAY/SLOW**) : Plays at program in slow motion.
- ⑥  (**REC**) : Starts recording.
- ⑦  (**FR**) : Rewinds at high speed. Each time you press this button the rewind speed is increased.
- ⑧  (**FF**) : Forwards at high speed. Each time you press this button the fast forward speed is increased.
- ⑨  (**SR**) : Goes to the previous chapter.
- ⑩  (**SF**) : Goes to the next chapter.
- ⑪ **OPT** : Adjusts options.
- ⑫ **EPG** : Displays the Electronic Program Guide.
- ⑬ **FAV** : Displays the favorite channel group list.
- ⑭ **SAT** : Displays the satellite list with their services list.
- ⑮ **SUB.T(RED)** : Displays the subtitle language list.
- ⑯ **TXT(GREEN)** : Displays the Teletext data.
- ⑰ **TIMER(YELLOW)** : Displays the Timer Setting menu for reservation.
- ⑱ **AUDIO(BLUE)** : Displays the audio list.
- ⑲ **MENU** : Displays the main menu.
- ⑳ **EXIT** : Returns to the previous menu.
- ㉑ **RECALL** : Displays the history channel lists
- ㉒ **INFO** : Displays the channel and program information.
- ㉓ **OK/LIST** : Selects a menu or confirms the selected operation.
- ㉔  : Navigates the cursor on the menu.
- ㉕ **APPS** : Displays the multimedia APPS list.
- ㉖ **VOL+ /VOL-** : Adjusts the audio volume.
- ㉗ **PAGE+ /PAGE-** : Moves up or down pages on the menu and TV/Radio List.
- ㉘ **USB** : Enters the Record Manager menu.
- ㉙ **NUMERIC(0~9) Key** : To select channels and input of channel numbers or characters.
- ㉚ **V.F** : Changes the video format.
- ㉛ **(TV/RADIO)** : Switches between TV and Radio modes.

# 1. GETTING STARTED

## 1.5 Connecting TV

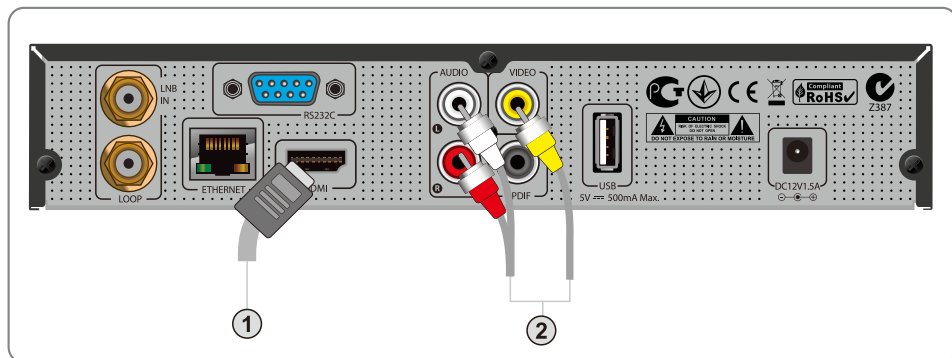

### 1 Connecting with HDMI cable

 
The HDMI connection is recommended for Digital TV. In case the TV has a HDMI input connector, a special all digital interface that provides the highest picture quality, connect the product to the TV with the HDMI cable.

### 2 Connecting with RCA Cinch cable

Plug one end of the cable into the VIDEO (yellow) socket on the product, and plug the other end into the matching socket on TV set.

Plug one ends of the cable in to the AUDIO L (white) and AUDIO R (red) sockets on the product, and the other ends into the matching sockets on the product or audio-video receiver.

## 1.6 Connecting Audio System

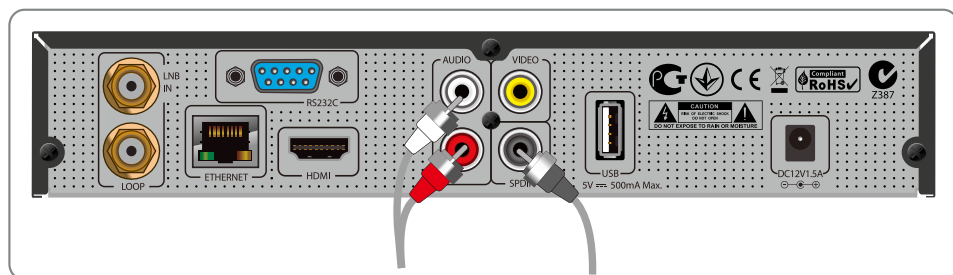


If you have external audio system like home theater, you can enjoy better and powerful audio as below

- Dolby digital (coaxial) : Use S/PDIF optical cable into Dolby digital decoder
- Stereo : Use 2-RCA cable for Audio L/R

# 1. GETTING STARTED
 
## 1.7 Powering On

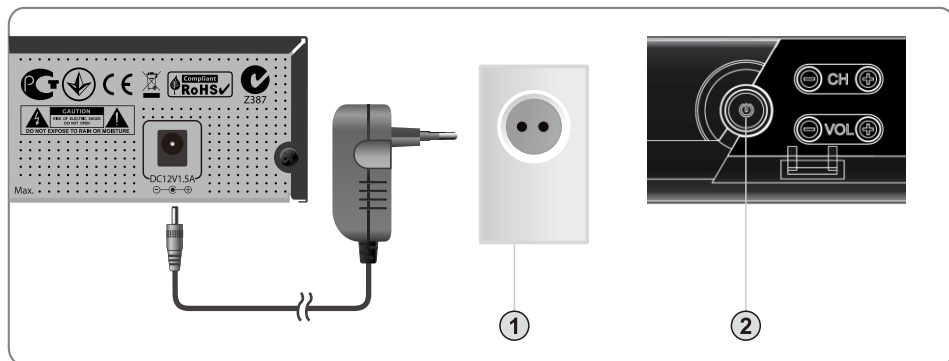

- ① Connect the power cord of the product to a wall outlet.
- ② Power on by pressing the POWER button of the remote control unit or the POWER button at the front panel of the product.

## 2. INSTALLATION

 
- The default password is “0000”

This chapter includes the first time setup of the Antenna Setting, Satellite List, Transponder List, Motor Setting and Limit Setup.



### 2.1 Antenna Setting


Antenna Setting enables you to enter the values such as Satellite, LNB Type, LNB Frequency, Transponder, 22kHz Tone, LNB Power and DiSEqC Mode of each item and start channel search.

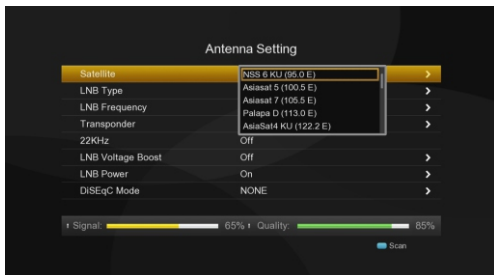

- (1) **Satellite**: Select the required satellite using the **OK** or **◀ ▶** button and press the **OK** button.
- (2) **LNB Type**: Select the required LNB Type using the **OK** or **◀ ▶** button and press the **OK** button.
- (3) **LNB Frequency**: Select the required LNB frequency using the **OK** or **◀ ▶** button and press the **OK** button.
- (4) **Transponder**: Select the required satellite using the **OK** or **◀ ▶** button and press the **OK** button.
- (5) **22KHz**: Select On/Off/Auto using the **OK** or **◀ ▶** button and press the **OK** button.
- (6) **LNB Power**: Select On/Off using the **OK** or **◀ ▶** button and press the **OK** button.
- (7) **DiSEqC Mode**: Select the required DiSEqC input using the **OK** or **◀ ▶** button and press the **OK** button.
- (8) Press the **Blue** button to start scan method.



## 2. INSTALLATION

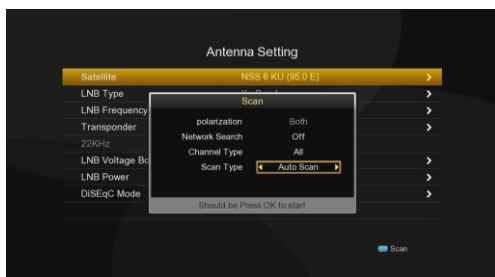 

- Network Search: Select **ON/OFF** using the ◀ ▶ button
  - Channel Type: Select All/FTA/TV/Radio using the ◀ ▶ button.
  - Scan Type: Select Auto Scan/Blind Scan/Manual Scan using ◀ ▶ button.
- (9) Press the **OK** button to start channel search.
- (10) Please wait while the search continues. If you want to stop the search, press the **Exit** button.
- (11) When channel search is complete, the results will appear.
- Select **Yes** and press the **OK** button to save the results.




### Note:

 - If you cannot find the required LNB frequency from the list, enter the frequency using the **NUMERIC (0-9)** buttons manually and press the **OK** button.
- When using universal LNB, select **Universal (9750/10600)**.  
The 22kHz tone value will be disabled.

## 2.2 Satellite List

Satellite List enables you to check antenna setting of each satellite, and perform **Add**, **Edit**, and **Delete** functions for satellites.

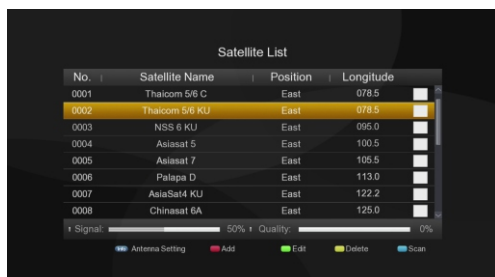

- (1) Info: Change the values of antenna setting for the selected satellite
- (2) Add: Add a new satellite
- (3) Edit: Change the selected satellite name, position or longitude
- (4) Delete: Delete the selected satellite(s)
- (5) Scan: Start channel search for the selected satellite(s)




### Note:

 - Deleting satellite(s) will cause deleting all the channels belonged to the selected satellite(s).

## 2. INSTALLATION

### 2.3 Transponder List


Transponder List enables you to check antenna setting and satellite of each transponder, and perform **Add**, **Edit**, and **Delete** functions for transponders.

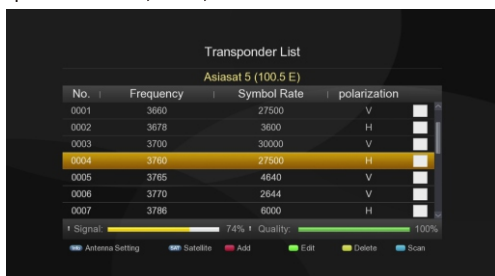

- (1) Info: Change the values of antenna setting for the selected transponder
- (2) SAT: Make a list of all the transponders according to the selected satellite
- (3) Add: Add a new transponder
- (4) Edit: Change frequency, symbol rate or polarisation
- (5) Delete: Delete the selected transponder(s)
- (6) Scan: Start channel search for the selected transponder(s)

### 2.4 Motor Setting

 
Motor Setting enables you to setup motor setting if you have DiSEqC motor installed with your antenna.

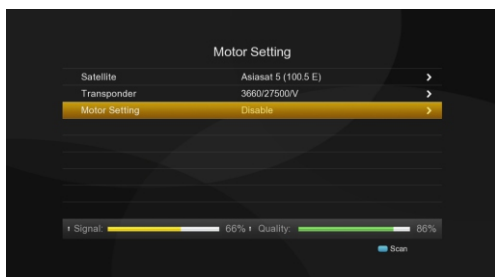

- (1) Satellite: Select a satellite to setup
- (2) Transponder: Select TP frequency you want to search
- (3) Motor Setting: Select Disable/USALS/ DiSEqC 1.2

## 2. INSTALLATION

 
### 2.5 Limit Setup

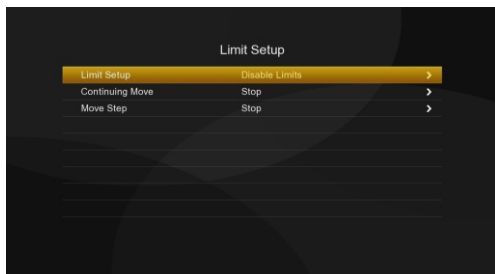

- (1) Limit Setup: Select **Set East Limit/Set West Limit/Disable Limit** using the **OK** or ◀ ▶ button and press the **OK** button
- (2) Continuing Move: Press the ◀ ▶ button to move motor in each direction. Motor moves continuously until stop it by pressing the **OK** button.
- (3) Move Step: Press the ◀ ▶ button to move motor in each direction. Motor moves only one step to locate satellite in a precise position

## 3. SETTING

 This chapter includes the first time setup of Network, Software Upgrade, User Settings, A/V, Date/Time, Timer List, Parental Lock, Version, Factory Reset and Smart RCU which will show you how to start the initial installation.

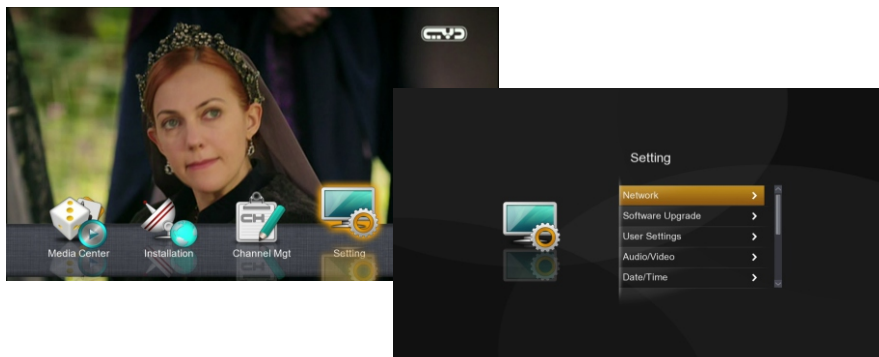


### 3.1 Network

Network enables you to configure the wired or wireless connection.



 - (1) Link Type: Press the **OK** or **◀ ▶** button. Select **Wire Network/Wi-Fi Network** using **▲ ▼** button and press the **OK** button.
- (2) Config: Press the **OK** or **◀ ▶** button.
  - (a) Usually the IP address is automatically assigned by the router (DHCP)
  - (b) If you need to assign a static IP address to your product, please enter the IP address, Netmask, Gateway and DNS Server.

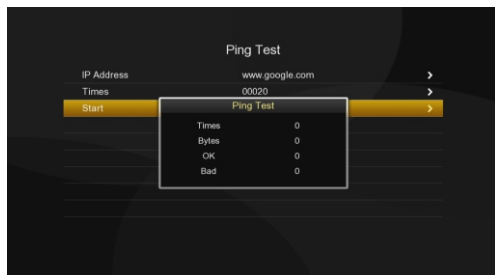


- (3) Ping Test: Press the **OK** or **◀ ▶** button.  
You can check the speed and performance of your Internet connection.

## 3. SETTING
 
### 3.2 Software Upgrade

Software upgrade helps you to upgrade the latest software version via USB or FTP.


#### 3.2.1 USB Transfer

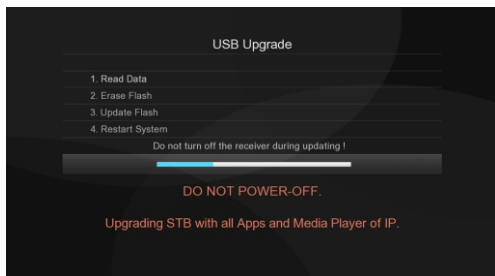

- (1) Put USB memory into USB port.
- (2) Select the software file which you want to upgrade in USB memory and press the **OK** button.

**Note:** • Please never pull out the USB memory or turn off the product while upgrading.

#### 3.2.2 Network Upgrade

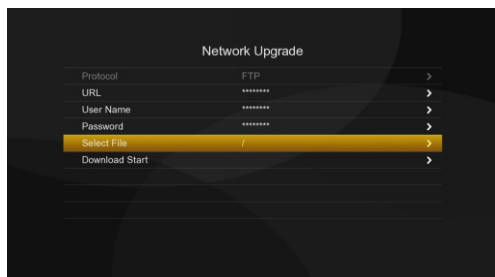 


- (1) URL: Input the URL address.
- (2) User Name: Input user name.
- (3) Password: Input password
- (4) Select File: Press the **OK** or **▼▲** button. Enter the address that the latest software locates using the **NUMERIC (0-9)** buttons manually and press the **OK** button.
- (5) Download Start: Press start to upgrade software.

## 3. SETTING
 
### 3.3 User Settings

User settings allow you to select the main, subtitle and audio languages from the given language option and adjust OSD Transparency, Hard Hearing, and limit info banner time.

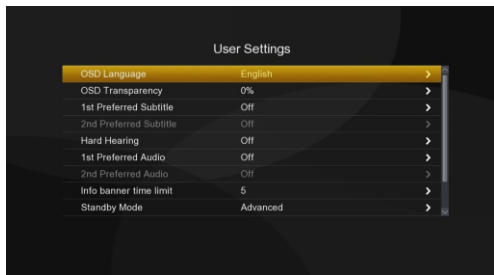

- (1) OSD Language: Press the **OK** or **◀ ▶** button to display OSD language list. Select the language that you want by pressing **▲▼** button and press the **OK** button.
- (2) OSD Transparency: Select the OSD transparency level that you want and press the **OK** button.
- (3) 1<sup>st</sup>/2<sup>nd</sup> Preferred Subtitle: Press the **OK** or **◀ ▶** button to display the 1<sup>st</sup> and 2<sup>nd</sup> Subtitle language lists. Select the language that you want by pressing **▲▼** button and press the **OK** button.
- (4) Hard Hearing: Select **On/Off** using the **OK** or **▲▼** button and press the **OK** button.
- (5) 1<sup>st</sup>/2<sup>nd</sup> Preferred Audio: Press the **OK** or **◀ ▶** button to display the 1<sup>st</sup> and 2<sup>nd</sup> Audio language lists. Select the language that you want by pressing **▲▼** button and press the **OK** button.
- (6) Info banner time limit: Select the banner time that you want by pressing **▲▼** button and press the **OK** button.
- (7) Standby Mode: Select either Advance or Power Save that you want by pressing **▲▼** button and press the **OK** button.
- (8) Weather Widget : Select **ON/OFF** using the **OK** or **▲▼** button and press the **OK** button.  
If you select ON, then weather information will be showed on the screen.
- (9) VFD Brightness : User can control VFD Brightness of the Front panel.

### 3.4 Audio/Video

Audio/Video allows you to adjust the output of the audio or video.



 
- (1) Contrast: Press the **OK** or **◀ ▶** button to adjust contrast between 0 and 24 and press the **OK** button.
- (2) Brightness: Press the **OK** or **◀ ▶** button to adjust brightness between 0 and 24 and press the **OK** button.

## 3. SETTING

- (3) Saturation: Press the **OK** or **◀ ▶** button to adjust saturation between 0 and 24 and press the **OK** button.
- (4) HUE: Press the **OK** or **◀ ▶** button to adjust hue between 0 and 30 and press the **OK** button.
- (5) Sharpness : Press the **OK** or **◀ ▶** button to adjust saturation between 0 and 24 and press the **OK** button.
- (6) SPDIF: Select **Bitsream/Mute/PCM** by pressing by pressing the **OK** or **▲▼** button and press the **OK** button.
- (7) Aspect Ratio: Select **16:9/Full Screen/4:3 LB/4:3 PS** by pressing by pressing the **OK** or **▲▼** button and press the **OK** button.
- (8) Video Output: Select **RGB/CVBS** by pressing by pressing the **OK** or **▲▼** button and press the **OK** button.
- (9) TV Type: Select **PAL/NTSC/Auto Detect** by pressing by pressing the **OK** or **▲▼** button and press the **OK** button.
- (10) Video Resolution: Select **Auto Detect/576i\_25/576p\_50/720p\_50/1080i\_25/1080p\_50** by pressing by pressing the **OK** or **▲▼** button and press the **OK** button.

### 3.5 Date/Time

Date/Time allows you to set your current time according to your location.

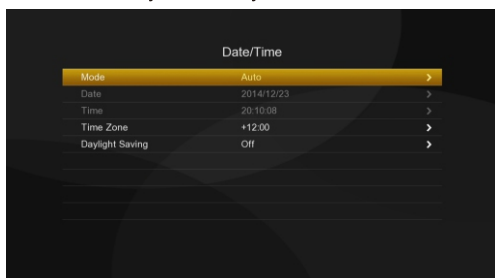


- (1) Mode: Select **Auto/Manual** by pressing by pressing the **OK** or **▲▼** button and press the **OK** button.
- (2) Date: Input directly **Year/Month/Date** using the **NUMERIC (0-9)** buttons manually and press the **OK** button.
- (3) Time: Input directly **Hour/Minute/Second** using the **NUMERIC (0-9)** buttons manually and press the **OK** button.
- (4) Time Zone: Select GMT time zone by pressing by pressing the **OK** or **▲▼** button and press the **OK** button.
- (5) Daylight Saving: Select **On/Off** by pressing by pressing the **OK** or **▲▼** button and press the **OK** button.

## 3. SETTING
 
### 3.6 Timer List

Timer list enables you to reserve new programmes you wish to watch, and modify/delete programmes reserved. You can also set the time you want to turn/off the product.

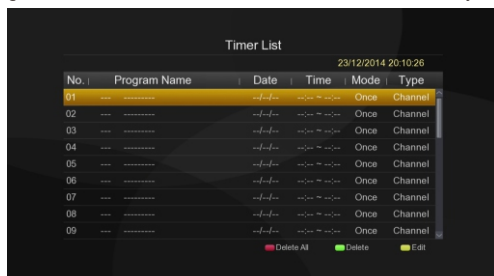


Timer List

23/12/2014 20:10:26

No.	Program Name	Date	Time	Mode	Type
01	.....	.....	.....	Once	Channel
02	.....	.....	.....	Once	Channel
03	.....	.....	.....	Once	Channel
04	.....	.....	.....	Once	Channel
05	.....	.....	.....	Once	Channel
06	.....	.....	.....	Once	Channel
07	.....	.....	.....	Once	Channel
08	.....	.....	.....	Once	Channel
09	.....	.....	.....	Once	Channel

Delete All Delete Edit

 Press the **Yellow** button to display **Timer Edit**.

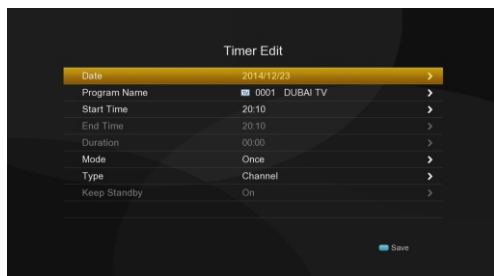

Timer Edit

Date 2014/12/23 >

Program Name 0001 DUBAI TV >

Start Time 20:10 >

End Time 20:10 >

Duration 00:00 >

Mode Once >

Type Channel >

Keep Standby On >

Save

- (1) Date: Press the ◀ ▶ button. Input directly **Year/Month/Date** using the **NUMERIC (0-9)** buttons manually and press the **OK** button.
- (2) Program Name: Press the ◀ ▶ button. Select the channel you want using ▲ ▼ button and press the **OK** button.
- (3) Start Time: Press the ◀ ▶ button. Set starting time using the **NUMERIC (0-9)** buttons manually and press the **OK** button.
- (4) Mode: Press the ◀ ▶ button. Select **preferences (Once/Daily/Weekly/Monthly)** using ▲ ▼ button and press the **OK** button.
- (5) Type: Press the ◀ ▶ button. Select **preferences (Recorder/Channel/Standby/On)** using ▲ ▼ button and press the **OK** button.
- (6) Keep Standby : Select On/Off using the OK or ▲ ▼ button and press the OK button.




## 3. SETTING
 
### 3.7 Parental Lock

Parental lock enables you to set system lock, parental rating and change Pin Code.

- **The default password is “0000”**

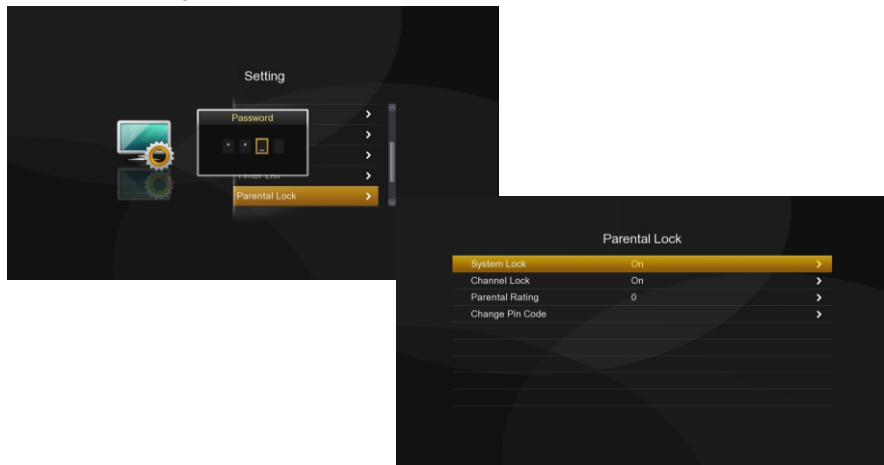

- (1) System Lock: Press the **OK** or ◀ ▶ button. Select **On/Off** and press the **OK** button.
- (2) Channel Lock: Press the **OK** or ◀ ▶ button. Select **On/Off** and press the **OK** button.
- (3) Parental Rating: Press the **OK** or ◀ ▶ button. Set parental rates using ▲▼ button and press the **OK** button.
- (4) Change Pin Code: Press the **OK** or ◀ ▶ button. Enter your new Pin Code using the **NUMERIC (0-9)** buttons manually and press the **OK** button.

### 3.8 Version

This option helps you to know the current hardware, software and firmware version and build date.

The image is a screenshot of the 'Version' menu. It displays the following information:

Version	
H/W Version	ESM47T1F4GB_M47T1B20F4
S/W Version	ESM47T1F4GB_V1.2.1
F/W Version	V1.4.0_M47B2GE_08/10/2014
Core Version	R222
Build Date	22/12/2014 13:38:33

## 3. SETTING

### 3.9 Factory Reset

Factory reset functions only when you want to return the product to the condition of factory default. All settings and channels will be deleted.

 
- The default password is “0000”



### 3.10 Smart RCU (Remote Control Unit)

This Smart RCU enables you to control your device with your smart phone's touch screen interface. And you can experience a TV Remote beforehand.

Both you smart phone and device should be connected to same AP (router).


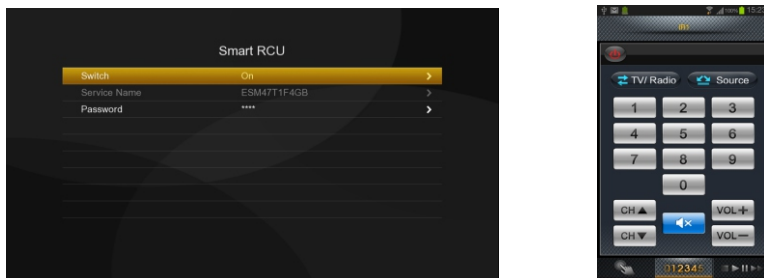


- (1) Switch: Press the **OK** or **◀ ▶** button. Select **On/Off** and press the **OK** button.
- (2) Password: Press the **OK** or **◀ ▶** button. Enter your new Password using the **NUMERIC (0-9)** buttons manually and press the **OK** button.


## 4. CHANNEL MGT
  
### 4.1 Channel Manager

Channel manger enables you to edit (move, lock, delete, delete all, sort, rename and find) channels in all channel lists.

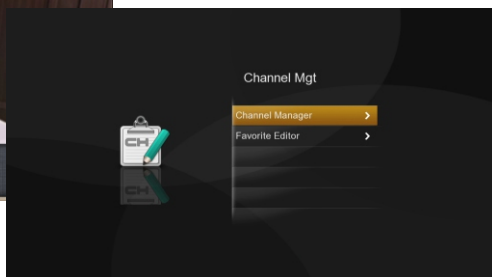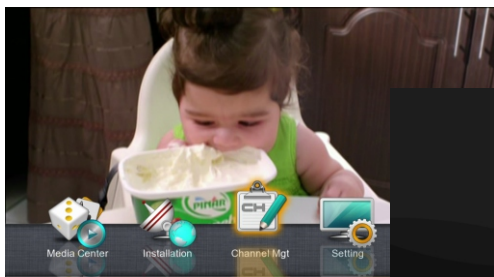


#### 4.1.1 Move

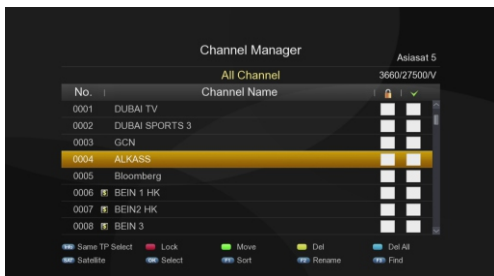 

- (1) Select a channel to move using ▲▼ button and press the **OK** button.
- (2) Locate cursor to the point you want to put and press the **Green** button.

#### 4.1.2 Lock

 The default password is “0000”

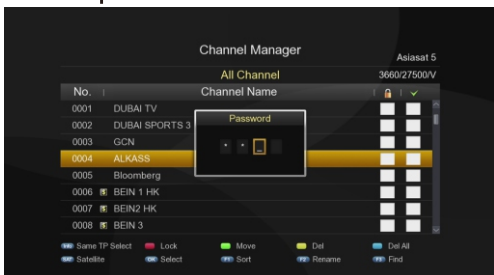


- (1) Select a channel to lock/unlock using ▲▼ button and press the **Red** button.
- (2) Enter the password using the **NUMERIC (0-9)** buttons manually.

## 4. CHANNEL MGT
 
### 4.1.3 Delete


The default password is “0000”

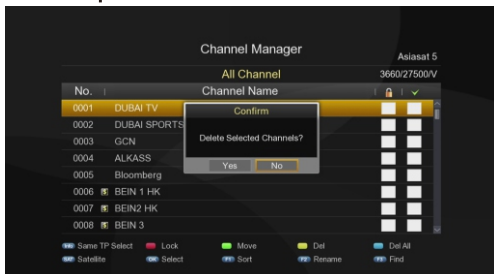

- (1) Select a channel to delete using ▲▼ button and press the **Yellow** button.
- (2) A pop-up will appear. Select **YES** and press the **OK** button.


### 4.1.4 Delete All

 The default password is “0000”

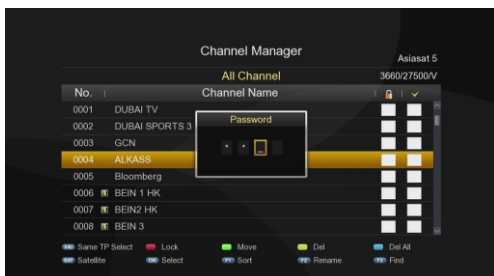

- (1) Select a channel to skip using ▲▼ button and press the **Blue** button


### 4.1.5 Sort

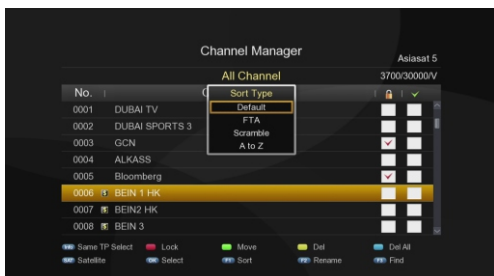 

- (1) Press **F1** button to sort the channels.
- (2) Select the preferences **FTA/Scramble/A to Z/ Z to A/TP Frequency** using ▲▼ button and press the **OK** button.


## 4. CHANNEL MGT
 
### 4.1.6 Rename

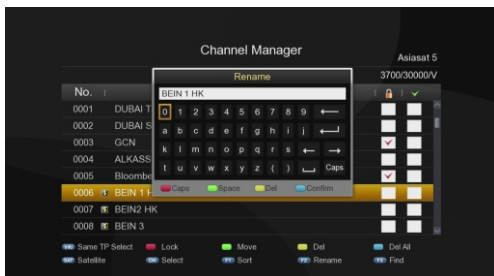

- (1) Select a channel to rename and press **F2** button.
- (2) A Pop-up will appear. Enter the name of the channel you wish to rename.

### 4.1.7 Find

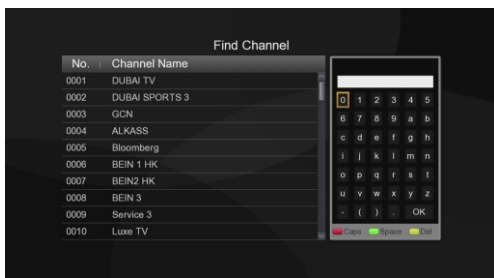 


- (1) Press **F3** button to find a channel.
- (2) A Pop-up will appear and enter the name of the channel you wish to find.

## 4.2 Favorite Editor

 Favorite editor enables you to edit (add, move, delete) channels in favorite lists.

### 4.2.1 Favorite List

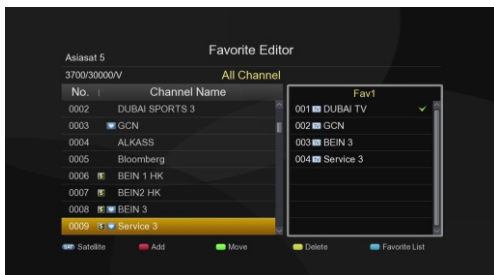

- (1) Press the **Blue** button to display favorite groups.
- (2) Select a channel to put into the favorite group list using ▲▼ button and press the **OK** button.

## 4. CHANNEL MGT

### 4.2.2 Add



- (1) Select a channel to move using ▲▼ button and press the **OK** button.
- (2) Press the **Red** button to add the selected channel into the selected group.

### 4.2.3 Move



- (1) Select a channel to move using ▲▼ button and press the **OK** button.
- (2) Locate cursor to the point you want to put and press the **Green** button.

 
### 4.2.4 Delete



- (1) Select a channel to delete using ▲▼ button and press the **OK** button.
- (2) Press the **Yellow** button to delete the selected channel.


## 5. MEDIA CENTER

This chapter will help you to play multimedia apps and multimedia players, configure multimedia setup, FTP client, and play games.

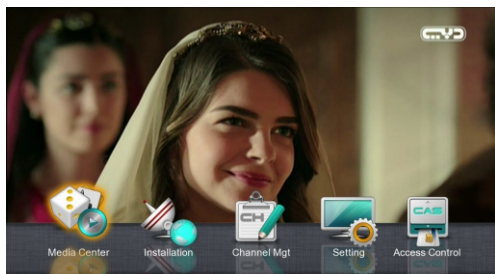


### 5.1 Multimedia Apps (Applications)

 Multimedia Application enables you to download Native32 Games, watch web albums, view maps and, check weather forecast, and enjoy Internet Radio, Dailymotion and YouTube.

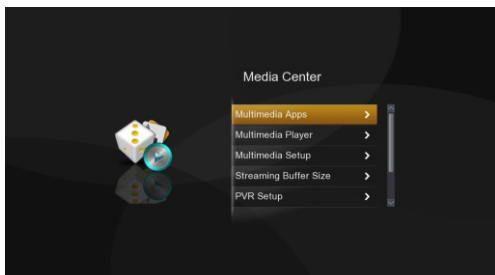

 
Press ◀ ▶ button to select a multimedia type and function.

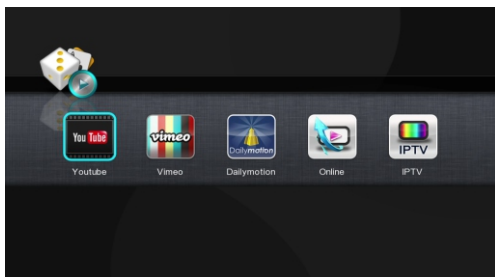

## 5. MEDIA CENTER


### 5.1.1 YouTube

 YouTube enables you to discover and watch shared videos.

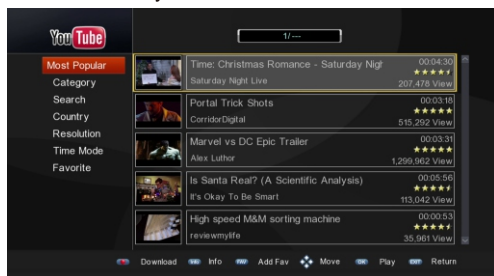


### 5.1.2 Vimeo

 Vimeo enables you to upload, share and watch shared videos.

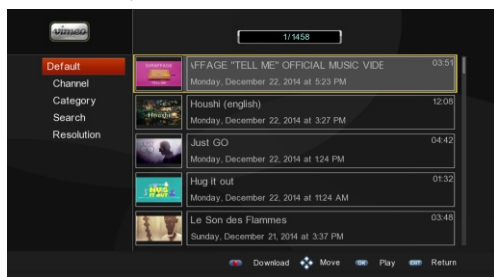

### 5.1.3 Dailymotion

 Dailymotion enables you to discover and watch shared videos.

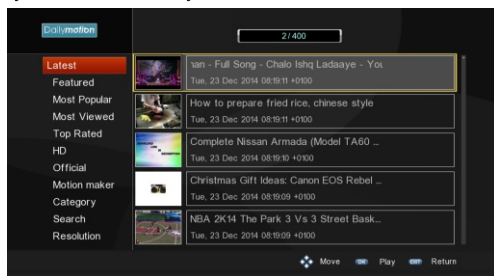




## 5. MEDIA CENTER

### 5.1.4 Online

 Online enables you to access to the Al Jazeera's live stream and video-on-demand.

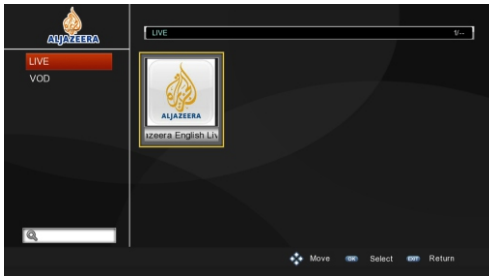


### 5.1.5 IPTV

It is unique feature that enables you to play and enjoy variety(various) media contents



### 5.1.6 Internet Radio

 
Internet Radio enables you to access to an extremely diverse range of Internet radio stations.

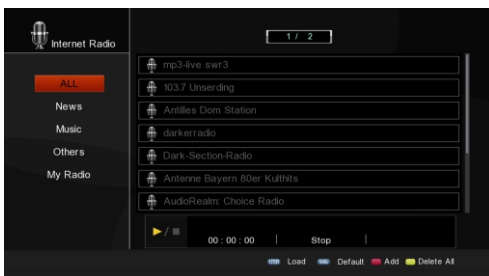

## 5. MEDIA CENTER


### 5.1.7 Adult

 This service only for adults. You can use it after the input password.

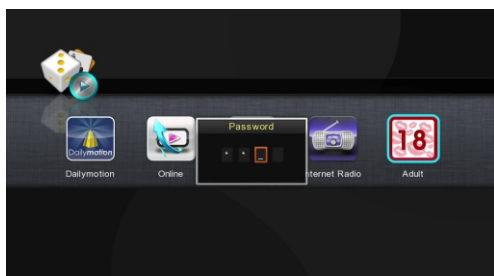


### 5.1.8 News

 News enables you to data feeds from various news sources.

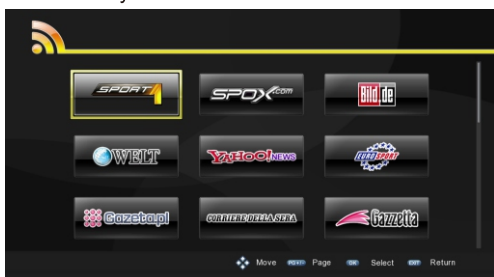

### 5.1.9 Web Albums

 
Web albums enable you to load and share photos through free online services such as **Picasa**, **Yupoo** and **Flickr**.

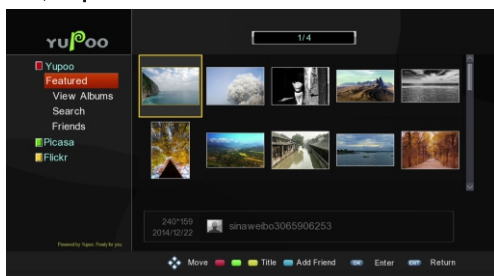

## 5. MEDIA CENTER


### 5.1.10 Google Maps

 Google maps enable you to find a place, view maps and get directions and so on.

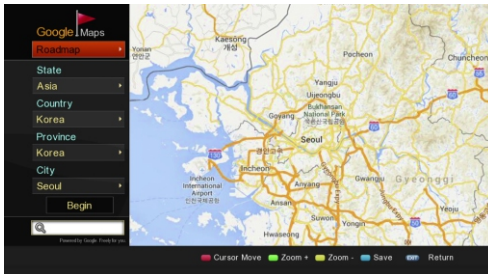

### 5.1.11 Weather

 Weather enables you to find weather forecasts for major cities throughout the world.

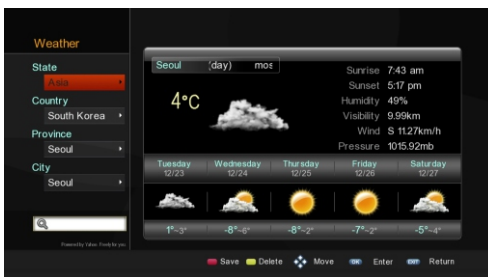


### 5.1.12 Game Download

Game Download enables you to download several kinds of free games to the USB memory stick and play the game downloaded.



(1) Select **Download** to download a game.


 
## 5. MEDIA CENTER

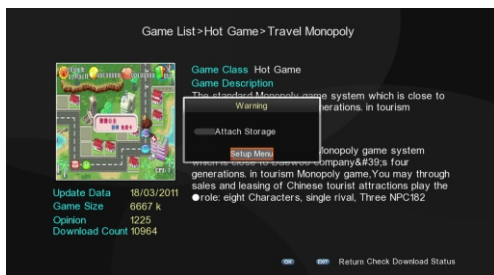

- (1) Select a folder in game list and select the game which you wish to download.
- (2) Press the **OK** button to start downloading.

### 5.1.13 DLNA

  DLNA is an industry-wide standard for sharing data over a home network. Stream photo, music and film from your Android smartphone, tablet to your receiver, TV, for example, play an MP3 track from your Android smartphone on your receiver. If you have a router in your home then you have a network and can use DLNA products on it, and if you have Wi-Fi then you can do it all wirelessly too.

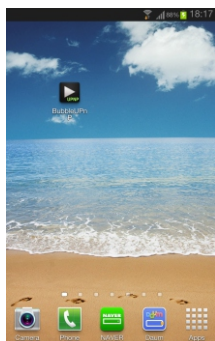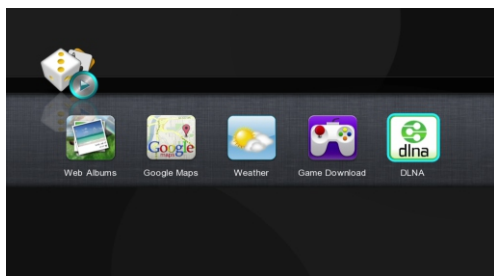


'**BubbleUPnP**' is free through Play Store and allows you to either connect to UPnP/DLNA clients (PS3, PVR, etc) or have the Smart TV act as a server itself. This free DLNA control point and media player/renderer can access photos, music, and video files from a DLNA media server.


## 5. MEDIA CENTER
 
### 5.1.13.1 DMP

Digital Media Servers (DMS) store content and make it available to network Digital Media Players (DMP) and Mobile Digital Media Players (M-DMP).

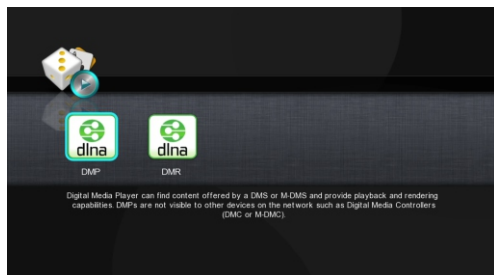

 \* To get involved with the media on your Android smartphone or tablet, install BubbleUPnP inside the Android market. Once it's installed, enable Wi-Fi within your device, communicate with your network, and launch the app.

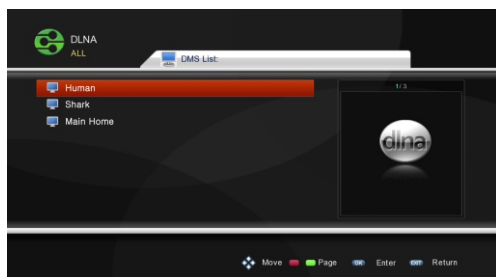


- (1) The list of Media Servers detected on your local network shall be displayed.
- (2) Digital Media Players can find content offered by DMS or M-DMS and provide playback and rendering capabilities.
- (3) Select **the server** containing media (image, photo, video) using ◀ ▶ button and press the **OK** button.




- (1) Select **the folder** containing media (music, video, image, play list) using ◀ ▶ button and press the **OK** button.

## 5. MEDIA CENTER

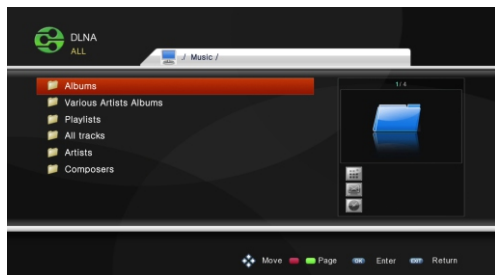 

 
- (1) Select the **sub folder** containing media (image, photo, video) using ◀ ▶ button and press the **OK** button.

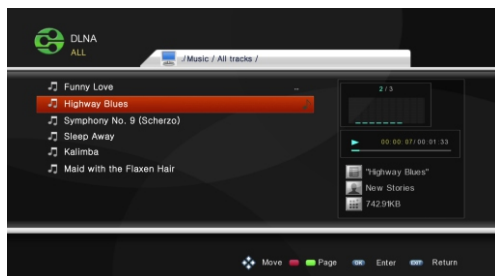

- (1) Select the media file you wish to listen, view or watch and press the **OK** button.
- (2) Play your local smartphone or tablet media to your receiver.



### 5.1.13.2 DMR

 Digital Media Renderer can render or play content received from a DMS or M-DMS. However, DMRs are unable to find content on the network, and must be set up by a Digital Media Controller (DMC or M-DMC).

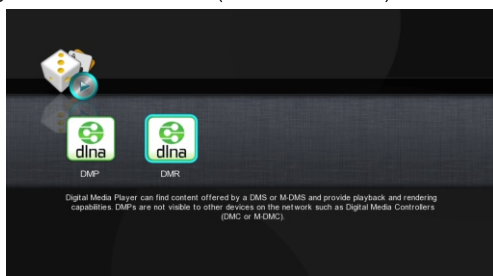

## 5. MEDIA CENTER

  Share your media (images, photos, videos) through local network

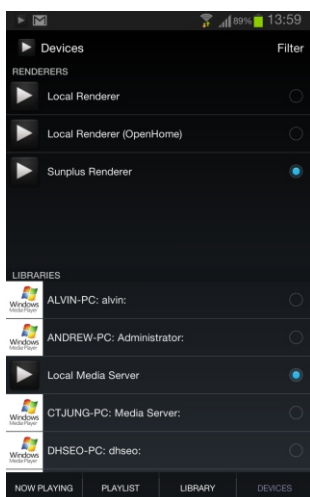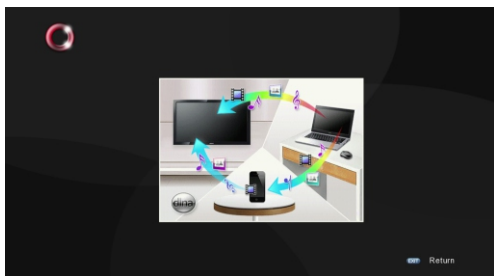


**\* To get involved with the media on your Android smartphone or tablet, install BubbleUPnP inside the Android market. Once it's installed, enable Wi-Fi within your device, communicate with your network, and launch the app.**

**BubbleUPnP Media Server** can stream your local phone/tablet media to other devices such as your receiver or to your Android device (standalone media player). Browse and play your local phone/tablet media from other devices (PS3, WMP, ...).


- (1) Launch the app called **BubbleUPnP**.
- (2) When it opens, you'll find options to select the renderer and the library. The renderer is the device that will play the media (audios, photos or videos) and the library is from where the media (audios, photos, videos) will play. You can choose to play videos from say, your smartphone, laptop or desktop and choose the receiver or television as the renderer. You can choose one of the many combinations available to you, depending on how many devices - source and players you have set-up at your home.

**[Tips: How to play your music, videos and images on your receiver from your smartphone on BubbleUPnP]**
 
## 5. MEDIA CENTER

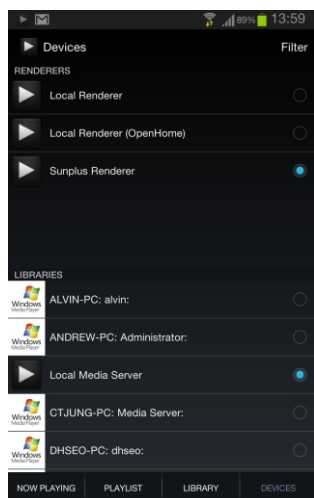

 
- (1) Tap the **DEVICES** tab at the bottom of the main interface.
- (2) Your smartphone as Local Media Server should show up in the Library list in the bottom half of the Devices menu.
- (3) Select your smartphone (Local Media Server) in the Library list.
- (4) Select **Sunplus render** in the Render list in the top half of the Devices menu.

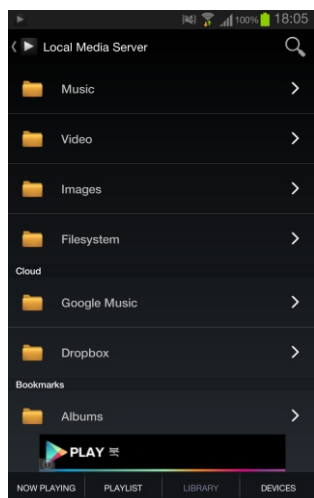


- (1) Tap the **Library** tab at the bottom.



## 5. MEDIA CENTER

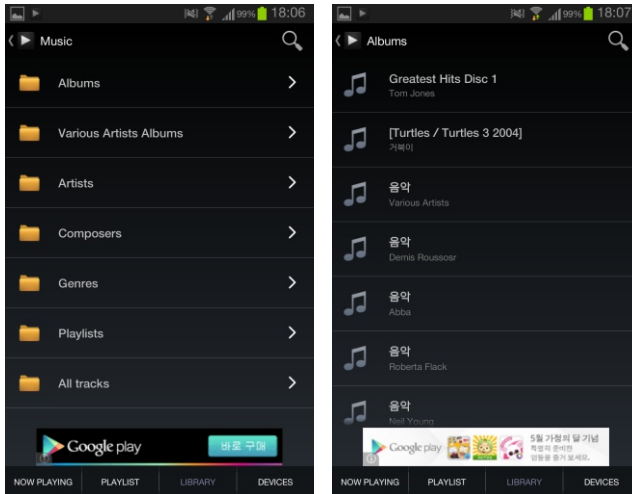 


 - (1) Choose from the Music, Videos, Pictures, and Playlists folders available on the smartphone.

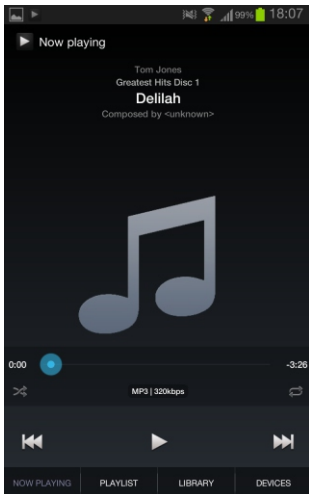

- (1) Tap the **Now Playing** tab at the bottom.

## 5. MEDIA CENTER

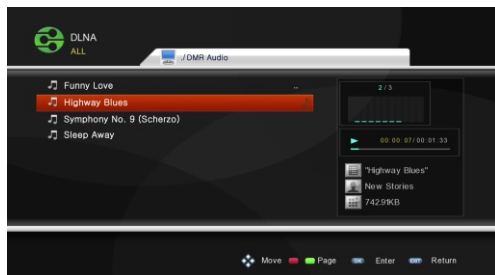 

- (1) Music will stream directly from the phone to the receiver without you have to touch the receiver's remote control unit.


### [Tips: Which devices can stream to each other?]

 In every DLNA set-up, a device can be set up to be a media player or a media source. So, there are a number of combinations in which you can stream media. For example, you can stream media from a PC to a phone, phone to a PC, PC to a TV, one PC to another PC and so on. DLNA isn't designed to merely stream media, it can also be used to remotely control devices and push media from one device to another.

## 5.2 Multimedia Player

Multimedia player enables you to listen to the music, see the photos, watch movies or recorded files, read electronic books and play Native32 Games from the sources of Local Storage (USB memory stick) or Network Storage.

### 5.2.1 Movie

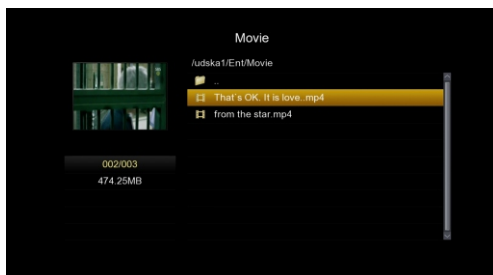

- (a) Select a movie file you wish to watch and press the **OK** button.


## 5. MEDIA CENTER
 
### 5.2.2 ISO Image




- (a) Select a video file which is in ISO format you wish to listen and press the **OK** button.

### 5.2.3 Music

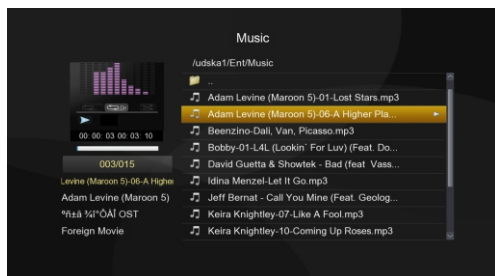

- (a) Select a music file you wish to listen and press the **OK** button.


### 5.2.4 Photo

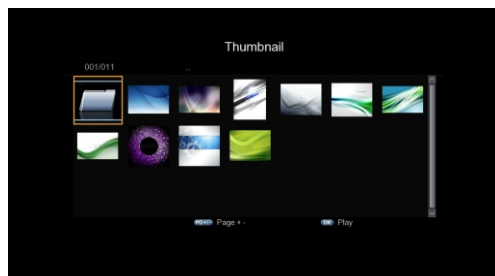 

- (a) Select a photo file you wish to view and press the **OK** button.

## 5. MEDIA CENTER
 
### 5.2.5 Games

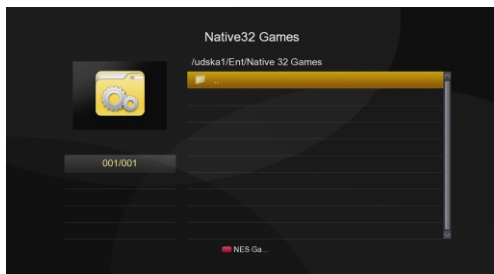

- (a) Select a game file you wish to play and press the **OK** button.
- (b) You can enjoy downloaded game.


### 5.2.6 EBook



 - (a) Select an e-Book txt file you wish to read and press the **OK** button.

### 5.2.7 Record Manager

User can see the recodered file from PVR function. Also user wants to format the USB, Press the yellow or blue button according to the USB type.

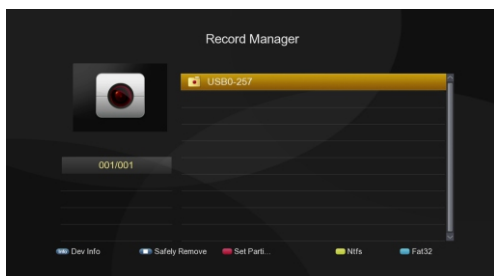

## 5. MEDIA CENTER

### 5.2.8 Disk Manager

Disk Manager enables you to move, copy, rename, and delete files.



- (a) Select a file you wish to manage using ▲▼ button.
- (b) Press the **Red** button to move/copy the selected file.
- (c) Press the **Green** button to rename the selected file.
- (d) Press the **Yellow** button to delete the selected file.
- (e) Press the **Blue** button to delete all files.

### 5.3 Multimedia Setup

 
Multimedia setup enables you to multimedia functions.



- (1) EBook Language: Press the **OK** or ◀ ▶ button. Select your preference using ▲▼ button and press the **OK** button.
- (2) EBook CodePage: Press the **OK** or ◀ ▶ button. Select your preference using ▲▼ button and press the **OK** button. **CODE PAGE** determines what character encoding.
- (3) MovieRepeat: Press the **OK** or ◀ ▶ button. Select your preference using ▲▼ button and press the **OK** button.
- (4) MusicRepeat/PhotoRepeat: Press the **OK** or ◀ ▶ button. Select your preference using ▲▼ button and press the **OK** button.
- (5) PhotoRepeat: Press the **OK** or ◀ ▶ button. Select your preference using ▲▼ button and press the **OK** button.
- (6) BGmusic (Background Music): Press the **OK** or ◀ ▶ button. Select **On/Off** you prefer using ▲▼ button and press the **OK** button.
- (7) SlideTime: Press the **OK** or ◀ ▶ button. Select **3/6/9/12/15**seconds you prefer using ▲▼ button and press the **OK** button.
- (8) Effect (Slide effect): Press the **OK** or ◀ ▶ button. Select your preference using ▲▼ button and press the **OK** button.

## 5. MEDIA CENTER

### 5.4 Streaming Buffer size

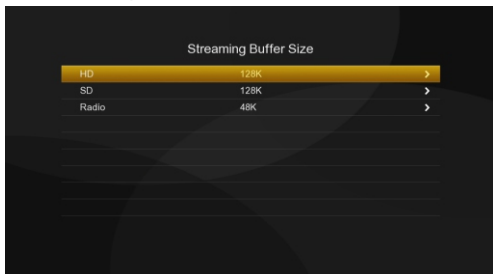

This function is for controlling buffer size that fills until a moving picture plays on the screen.


### 5.5 PVR Setup



 Before using the PVR function, user can setup by own need and convenient

### 5.6 FTP Client


FTP client enables you to access an FTP server and download/upload files via FTP.

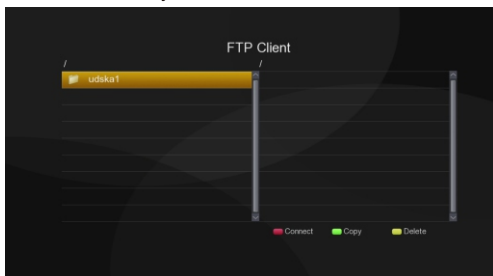

- (1) Select Connect using the **Red** button to access a FTP server.
- (2) Select a file or files to upload or download to the FTP server and press the **Green** button to copy files.
- (3) Select a file or files to delete from the FTP server and press the **Yellow** button to delete files.

5.7 GAME

 You can enjoy default games.

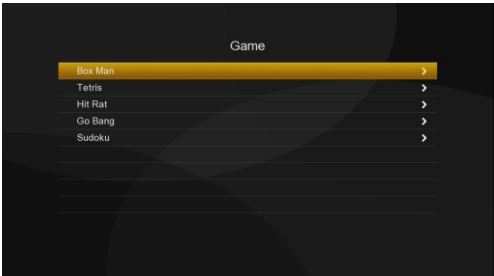

## 6. SPECIFICATION

MAIN CHIPSET	
CPU	Sunplus SPHE1506 High-Performance 667MHz 32-bit MIPS 24KEc
MEMORY	
FLASH	16MB
DDR3 SDRAM	256MB
SATELLITE TUNER	
NUMBER OF TUNERS	1
INPUT/OUTPUT CONNECTOR	F-Type, IEC 169-24, Female
INPUT FREQUENCY RANGE	950MHz ~ 2150MHz
INPUT SIGNAL LEVEL	-65dBm ~ -25dBm
CONNECTOR	75Ω Unbalanced
INPUT IMPEDANCE	Vertical: +13.5V (+14.5V at high voltage) Horizontal: +18V (+18.5V at high voltage) Current: Max. 500mA (Short Circuit Protection)
22KHz TONE	Frequency 22KHz±4KHz Amplitude 0.6±0.2Vpp
DiSEqC CONTROL	1.0, 1.1 & 1.2 Version Compliant
CHANNEL SELECTION	PLL Frequency Synthesizer
DEMODULATOR	
TYPE	DVB-S, DVB-S2
DEMODULATION	QPSK, 8PSK
INPUT SYMBOL RATE	1~45MS/s, SCPC and MCPC Capable
FEC MODE	DVB-S: Auto, 1/2, 2/3, 3/4, 5/6, 7/8 DVB-S2 - QPSK: Auto, 1/2, 3/5, 2/3, 4/5, 5/6, 8/9, 9/10 - 8PSK: Auto, 3/5, 2/3, 3/4, 5/6, 8/9, 9/10
VIDEO DECODER	
TRANSPORT STREAM	MPEG-2 ISO/IEC 13818-2 MPEG-4 Part 2
PROFILE LEVEL	MPEG-2 MP@ML, MPEG-2 MP@HL MPEG-4 AVC/H.264 HP@L4.1
VIDEO FORMAT	4:3, 16:9, Letter Box
VIDEO RESOLUTION	1080p, 1080i, 720p, 576p, 576i, 480p, 480i
AUDIO DECODER	
AUDIO DECODING	MPEG/MusiCam Layer I & II, AC3 Down Mix
AUDIO MODE	Mono / Dual / Joint Stereo / Stereo
AUDIO BIT RATE	32Kbits/s – 384Kbits/s
SAMPLING FREQUENCY	32, 44.1, 48KHz



## 6. SPECIFICATION

### AUDIO / VIDEO / DATA INPUT/OUTPUT

VIDEO(CVBS) OUTPUT	1 x RCA Cinch
AUDIO OUTPUT	2 x RCA Cinch (L/R)
DIGITAL AUDIO OUTPUT	1 x S/PDIF (Coaxial)
RS-232C	9 Pin D-Sub Socket Type (Max.115200bps)
HDMI	1 x HDMI1.3
USB	2 x (USB 2.0 Host), Front & Rear
ETHERNET	1 x RJ45 Port

### CONDITIONAL ACCESS SYSTEM

SMART CARD	1 Slot
------------	--------

### POWER SUPPLY

INPUT VOLTAGE/FREQUENCY	DC 12V 1.5A /50/60Hz
TYPE	External Adaptor
AC ADAPTER INPUT	Input: 100-240V (50Hz/60Hz)
	Output : 12V-1.5A

### PHYSICAL CHARACTERISTICS

DIMENSION (W x H x D)	220 x 40 x 135 (mm)
NET WEIGHT	Approx. 0.6Kg
OPERATING TEMPERATURE	0 °C to +45 °C
STORAGE TEMPERATURE	-10 °C to +70 °C





